



A GUIDE TO DONNING STERILE GLOVES

1

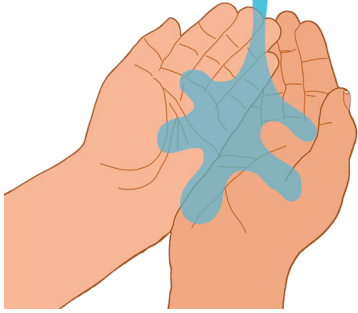


Before donning gloves make sure to wash and/or disinfect your hands in order to prevent unnecessary contamination.

2

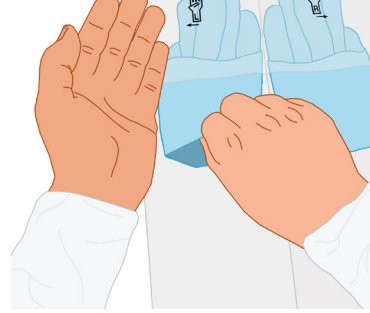

Sterile gloves are hand specific. Begin with the glove for your non-dominant hand by gripping the bottom of the folded cuff to remove from the packaging.

3

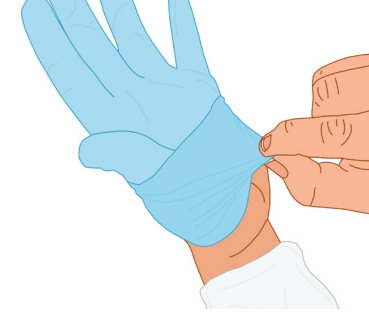

Gently roll down the cuff with your thumb and index finger. Avoid touching the inside of the cuff with your bare hand and, for now, leave it half rolled down.

4



Lift the second glove up by hooking your index finger under the folded cuff of the glove. Place the glove over your fingers.

5




Pull the glove down, making sure you avoid puncturing the gloves with fingernails by pulling down gloves with your knuckles.

6




Secure the cuff firmly over your sleeve creating a secure barrier from bodily contaminants. Make sure gloved fingertips do not touch your skin.

7

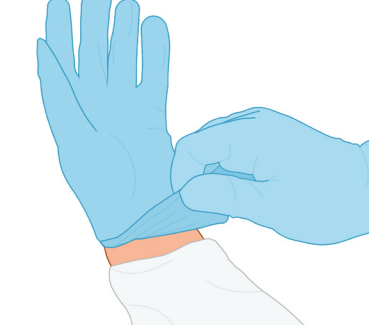

Now your dominant hand is gloved, pull the cuff of the first glove fully down over your sleeve to ensure minimal risk of contamination.

8

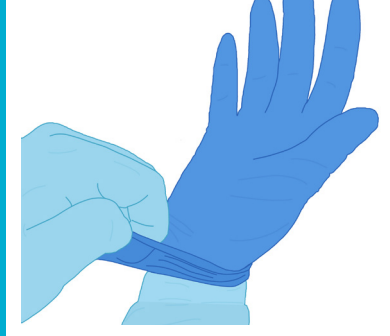

In higher stringent cleanrooms it may be necessary to wear two pairs of gloves, often called "double donning". However, this step depends on your ISO.